



智能指纹锁

INTELLIGENT FINGERPRINT LOCK

使用前请阅读操作指南

 
Please Carefully Read The Operation Instruction Manual Before Use

指纹挂锁说明书

User Manual For Fingerprint Padlock


(版本:V1.0)

Version : V1.0

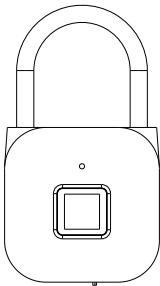

1

 外观示意图 Diagram



指纹开锁处
Fingerprint Unlock

USB充电接口
USB Charging Port



2 给设备充电 Charge Device

- 使用Micro-USB充电头给设备充电

 
Use Micro-USB charging head to charge the device.

- 红灯常亮（充电中） 红灯微亮（已充满）

Red light is always on (charging)

- 从完全没电到充满30分钟，待机最长5个月

It takes 30 minutes to fully charged the device, and can be on standby for up to five months.

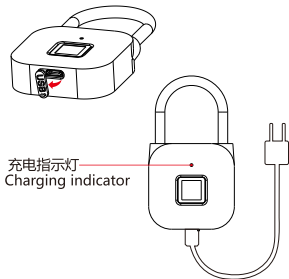

3

操作说明

Operating instructions

一、录入指纹（第一次录入的指纹为管理员）

步骤1 长按锁杆5秒进入学习模式（红灯闪烁）

步骤2 将手指放置在指纹面采集

步骤3 蓝灯亮为成功一次 松开继续录入

步骤4 五次录完后自动退出即可开锁

一、Enter fingerprint

（ The first fingerprint entered is the administrator ）

Step 1: Press the lock lever for 5 seconds to enter 'fingerprint entry mode' (red light flashes)

Step 2: Place your finger in the fingerprint collection area

Step 3: Enter successfully, the blue light will be on, release and continue to enter the same fingerprint.

Step 4: Enter the fingerprint 5 times successfully, then you can unlock it.

二、新增指纹

 
步骤1 长按锁杆5秒进入学习模式（红蓝灯闪烁）

步骤2 管理员指纹授权

步骤3 将手指放置在指纹面采集

步骤3 蓝灯亮为成功一次 松开继续录入

步骤4 五次录完后自动退出即可开锁



二 . Add member' s fingerprint

(In the case of an administrator)

Step 1: Press the lock lever for 5 seconds to enter 'fingerprint entry mode' (red and blue light flashes)

Step 2: Confirmed by the administrator' s fingerprint,Place the finger need to be added in the fingerprint collection area

Step 3: Enter successfully, the blue light will be on, release and continue to enter the same fingerprint.

Step 4: Enter the fingerprint 5 times successfully, then you can unlock it.

三、恢复出厂

步骤1 长按锁杆10秒进入恢复出厂模式

(红蓝灯闪烁加快)

步骤2 管理员指纹授权确认

步骤3 成功后即恢复出厂 任何指纹都能开
流程回到录入指纹

三 . Restore factory settings

Step 1: Press the lock lever for 10 seconds to enter "factory restore mode" (red and blue lights flash quickly)

Step 2: Confirmed by the administrator' s fingerprint, then remove the all fingerprints.

Step 3: When factory Settings are restored, any fingerprint can unlock, Process back to 'fingerprint entry mode' .



开锁

Unlock



关锁

close and lock

***出厂前任何指纹都可开锁**

Factory Settings : Any fingerprint can unlock.

***同一指纹采集边缘会更灵敏**

Different angles of fingerprint collection, it will be more sensitive

4 LED灯状态 Status of LED indicator

充电状态 Charging status

充电中：红灯常亮 充满：红灯微亮

Charging : Red light is always on Fully charged : Dim red light

指纹录入模式 Fingerprint entry mode

没有管理员：红灯闪烁

No administrator : Red light flashes

有管理员：红蓝闪烁

Have an administrator : Red and blue light flashes

恢复出厂 Restore factory settings

红蓝闪烁从慢闪到快闪

Have an Red and blue light flashes, from slow to quick

指纹反馈 Fingerprint Feedback

指纹成功：蓝色亮

Enter successfully : Blue light flashes

指纹失败：红色亮

Enter failed : Red light flashes

电量反馈 Battery feedback

开锁后蓝灯闪烁：电量正常

Blue light flashes after unlocking : Battery is normal

开锁后红灯闪烁：电量不足

Red light flashes after unlocking : Low battery

5 产品参数 Product Parameter

工作电压	DC 3.7V
后备电池	100mAH 软包锂电池
待机功耗	< 25uA
机身颜色	白银色
外壳材质	锌合金
机身尺寸	L81*W45*H13.5mm
重量	106g ± 1g
工作温度	-20℃至+60℃
储存温度	-40℃至+85℃
充电速度	约25分钟充满/ 5V输入Micro USB
工作时间	最长约使用5个月（平均一天开4次）
开锁方式	指纹开锁
指纹数	最高39组指纹
安全系数	A

Working voltage	DC 3.7V
Backup battery	100mAh Soft lithium battery
Standby power consumption	< 25uA
body color	Silver
shell material	Kirsite
Dimensions	L81*W45*H13.5mm
weight	106g±1g
Operating temperature	-20℃至+60℃
Storage temperature	-40℃至+85℃
Charging speed	Micro USB 30 minutes fully charged, 5V input Micro USB
Working Time	Up to 5 months Unlock 4 times a day
Unlocking method	Fingerprint
Number of fingerprints	Up to 39 sets of fingerprints
Safety factor	A

6 注意事项 Notes

开不了锁 Unable to unlock

给设备充电 / 按下锁杆复位

Charge the device/Press the lock lever to reset

灵敏度低 Low sensitivity

指纹面沾水会影响开锁 / 越用越灵敏

Water on the fingerprint surface will affect the unlocking/
Become more sensitive after using more

低电量 Low battery

当开锁成功时亮红灯时请及时充电

When the red light is on after unlocking successfully, please
charge the device in time.

保修卡

Warranty Card

用户名称 User name		联系电话 Tell	
通信地址 Address			
产品型号 Product model number		产品序列号 Product item number	
购买日期 Date of purchase		发票号码 Invoice number	
运营商名称 Operator name			

感谢您购买本产品，此卡为您的免费保修凭证，请妥善保管。

Thank you for purchasing this product, this card is your free maintenance certificate, please keep it safely.

保修说明

Warranty description

1、请于维修时连同购货票据一并出示，如资料相符，保修方可有效。

1. Please present the proof together with the purchase receipt at the time of maintenance. If the information matches, the warranty will be valid.

2、如发现此卡所登记的型号和编码曾被涂改或被购机的型号和编码有不同，请及时与本公司联系。

2. If you find that the model and code registered on this card have been altered or the model and code of the purchased device are different. Please contact us in time





智能指纹锁

INTELLIGENT FINGERPRINT LOCK