

LightBlue User Manual For SH-HC-08 Bluetooth module

1. Down “LightBlue” from AppStore
2. After Install LightBlue , IF Moudle works, the following screen will appear.



3. Click “SH-HC-08” will enter the next screen,when this screen appears, indicating that the connection has been established.

President of bright led lights

Software Revision String >
SHV1.5

Manufacturer Name String >
www.sihaicorp.com

Regulatory Certification Data List >
<fe006578 70657269 6d656e74 616c>

PnP ID >
<010d0000 001001>

UUID: FFE0

Characteristic 1 >
Properties: Read Write Without Response N...
UUID: FFE1

Log


The services uuid is FFE0.

4. Send data from the phone to the Bluetooth module


Click **UUID:FFE1**



And the follow screen appears.

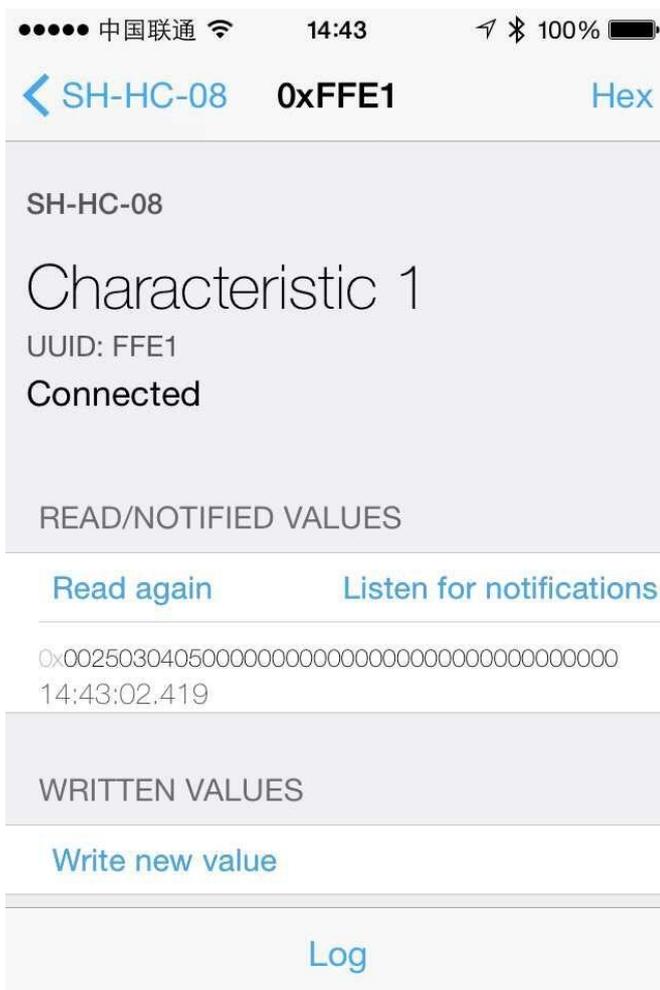

Click "Write new value"

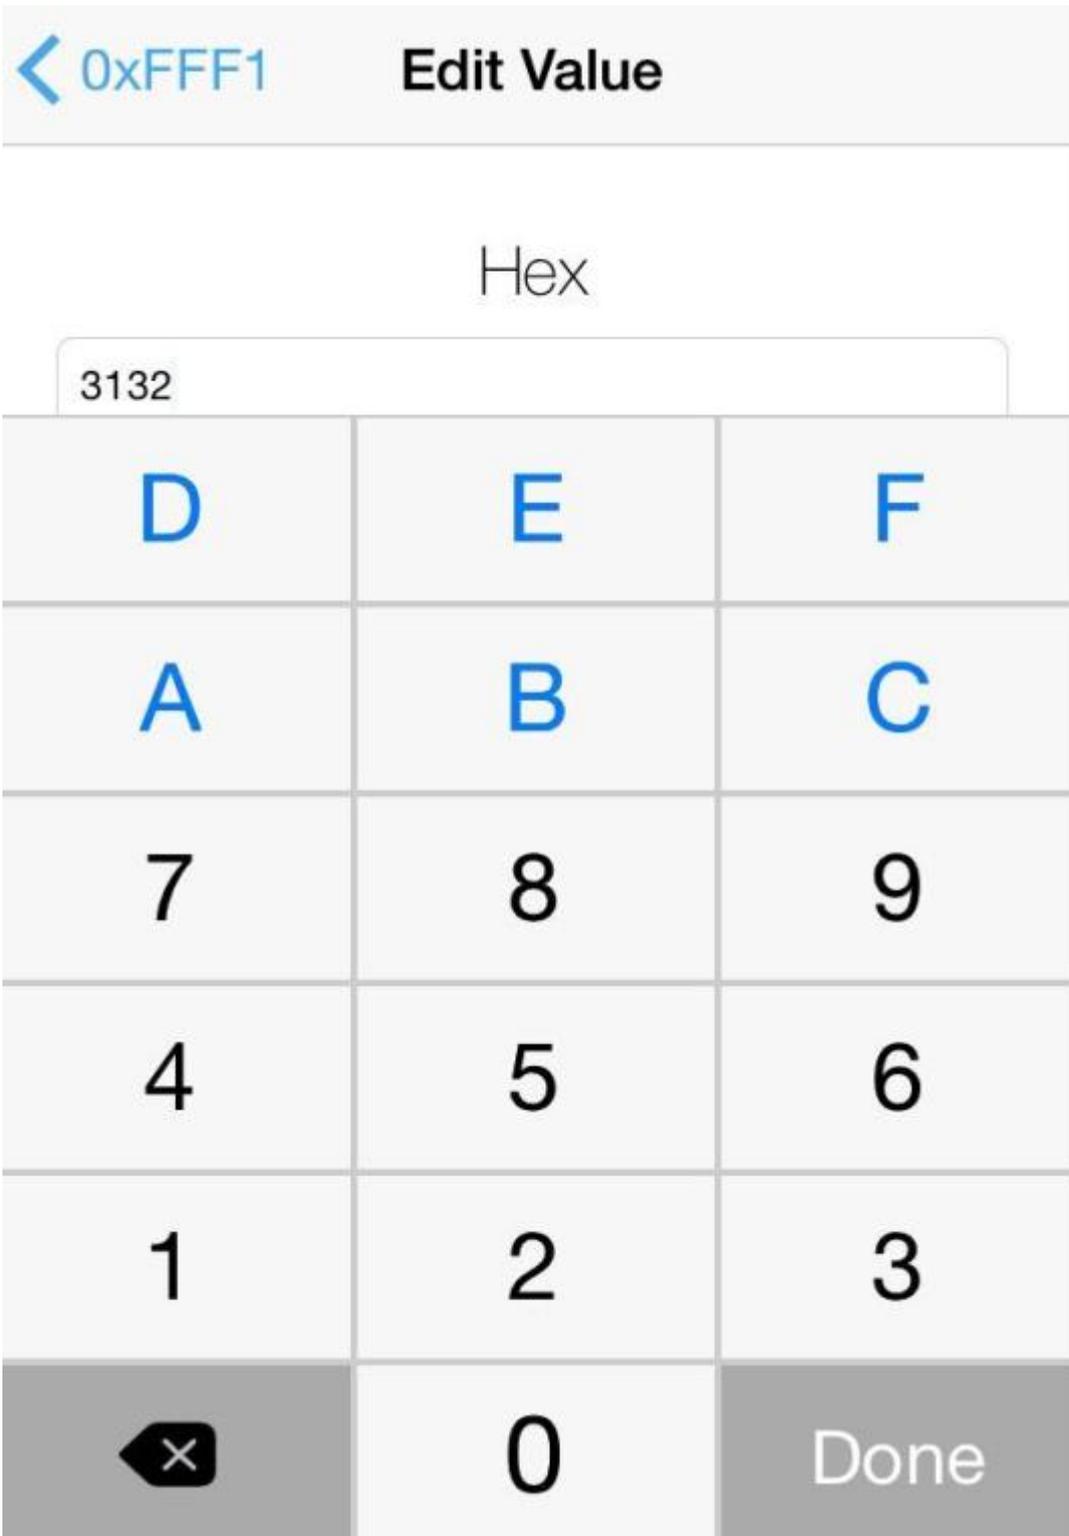

Then send Hexadecimal data.

Will receive the data on the serial module.

5. Receive the data sent to the mobile phone from a Bluetooth module

Click “Listen for notification” then the screen becomes as followed:



When you send data from a serial port module, the data will be displayed in this interface.