

# SH-A11 Bluetooth Eddystone/iBeacon Dongle User Guide

## 1, Download Driver for this dongle

If your computer does not detect the serial port, you need to download the driver for CP2104 usb to ttl chip.Driver download URL:


<https://www.silabs.com/products/development-tools/software/usb-to-uart-bridge-vcp-drivers>

## 2, Download DSD TECH Bluetooth Tool (Only Support Windows OS)

Please open this website: <http://www.dsdtech-global.com/2017/09/SH-A11.html>

## 3, Open “DSD TECH Config Tool”, and Choose “UART” ,then Click “Open” to Open UART Port

Please note: Baud rate is 9600 . (old version is 115200 which produced in 2017 );

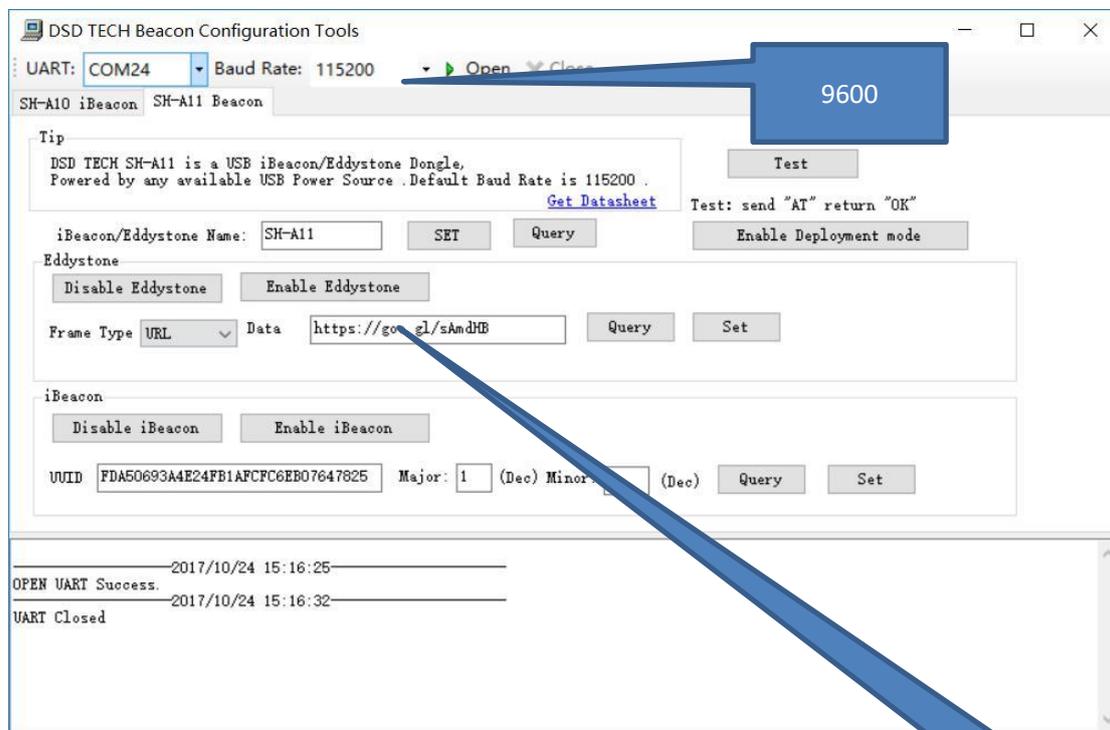

## 4, Click “Test”

If all goes well, you will get "OK". This means the driver was installed successfully.

Your URL  
(only for Eddystone)

## 5, If you need to modify the broadcast URL, Please refer the following:



Just Change the URL to yours,and Click “Set” ,If the setting is successful, it will return "OK"

We recommend that you shorten the URL by using the [Google URL Shortener](#), which gives you better broadcast efficiency.

## About Test App:

For Android Devices :Please google "nRF Connect" or “BLE Scanner” and install it ,It is a free app.

For iOS Devices ,Please install “BLE Scanner” or “Eddystone URL” from appstore.

You can turn on Eddystone and iBeacon features at the same time.

Any question,please contact DSD TECH Support Team: [dsdtech@163.com](mailto:dsdtech@163.com)

Our Website:[http:// www.dsdtech-global.com](http://www.dsdtech-global.com)