

# 前言

Varmilo音译即为 "阿米洛" ,取自世界语 "Via" "armilo" 。寓意:为您定制的专属装备。阿米洛在保证优良做工的同时,希望能够满足顾客的个性化定制需求。此外阿米洛也坚持在有限的键盘空间内进行创作,试图让用户的桌面更加丰富多彩。


——键盘艺术家·阿米洛

# 产品特征

全新系列的阿米洛机械键盘均采用阿米洛静电容机械轴或高品质品牌机械轴体,具有稳定的内部结构与触感。

#### , 日常保养

先用拔键器拔掉键帽,然后倒置键盘,轻轻拍打键盘背面,将残渣倒出。再用毛刷清理键盘上粘 附的残渣、灰尘。若还有残留,用干净的抹布蘸酒精进行擦拭,直到干净为止。然后放至阴凉通风处, 晾干。使用过程中,请勿频繁拔插、拉扯、弯折键盘线,尤其是线键分离的键盘,容易造成键盘插口处 松动或脱落。

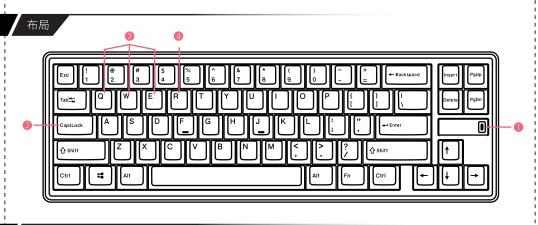





# 注意事项

- ·蓝牙设备必须为蓝牙5.0或者以上
- ·所有与Fn键组合的操作,必须是先按Fn不松手,再按组合的功能键执行功能;按键释放不分先后

### 指示灯说明

- 充电指示灯【基础款】:充电时红灯常亮,充满电后恢复正常背光。电量不足时红灯闪烁,提示要充电。
- ❷ 充电指示灯【主题款】:充电时,CAPSLOCK指示灯上的红灯常亮,充满电后恢复正常背光,

电量不足时红灯闪烁,提示要充电。

CAPSLOCK指示灯:大写时亮白光亮,小写时恢复背光灯。

- ❸ 蓝牙指示灯:○、W、E 键指示灯对应通道灯闪烁蓝灯表示等待配对,连接成功后熄灭。
- 2.4G指示灯:R键指示灯绿灯闪烁表示等待配对,连接成功后熄灭。

# 有线,蓝牙/2.4G切换

- ·无线(蓝牙/2.4G)开关在CAPSLOCK键下面,需要拆开键帽来进行拨动开关:
- 开关向上为无线(蓝牙/2.4G)模式,开关向下为有线模式。
- ·在无线模式下,连接充电线仅对键盘进行充电。

# 蓝牙模式连接操作

·开关向上拨动,切换成无线模式,在需要连接的设备端打开蓝牙进行搜索,

键盘的蓝牙名称为"Varmilo S68"。

蓝牙可搜索时间为2分钟。
·Fn+Q/W/E切换蓝牙频道,初次切换时,Q/W/E键蓝色灯闪烁,进入配对状态,

连接设备后恢复至之前背光灯模式。

设置成功后,切换蓝牙频道会自动匹配设置好的设备。

- ·Fn+Q/W/E长按三秒,重置对应的蓝牙频道,重新进入匹配状态。
- ·Fn+X长按3秒背光灯(白色)闪烁3次,清除蓝牙之前的配对记录

(仅有在蓝牙模式下才可以清除)。

### 2.4G连接操作

·开关拨动向上,切换成无线模式,Fn+R长按3秒,2.4G进行配对,此时R键绿色灯闪烁,进入配对状态,插上2.4G接收器即可使用。

Δ

#### 灯光效果

- ·灯效切换: Fn+左Shift或者右 Shift, 切换当前灯效下的上一个, 或者下一个灯效模式。
- ·颜色切换: Fn+"【"或者"】",切换单色灯效下的上一个或者下一个颜色
- ·灯效速度:Fn+"←"或者"→",降低或者提高当前RGB灯效的动态速度
- ·灯效亮度:Fn+"↓"或者"↑",降低或者提高当前RGB灯效的灯效亮度。

# Tap层功能介绍

- ·在驱动-全局设置中可以开启/关闭Tap层功能。
- ·开启Tap功能后,长按按键可以触发Tap层功能,短按按键则触发原键值。
- ·灵敏度越高,触发Tap功能所需的按键时间越短。
- ·在驱动软件的键位设置里,切换到Tap层,可对Tap层功能进行修改。

# 系统切换

·Fn + Tab长按5秒切换Win /Mac系统,充电指示灯(主题款为CAPSLOCK灯)闪烁白灯3秒后熄灭。

# 多媒体功能

按键组合	按键功能	按键组合	按键功能	按键组合	按键功能	按键组合	按键功能
Fn + F	音乐	Fn + G	邮件	Fn + H	计算器	Fn + J	我的电脑
Fn + T	上一曲	Fn + Y	播放/暂停	Fn + U	下一曲		
Fn + O	音量减小	Fn + I	静音	Fn + P	音量加大		
Fn + L	PSC/SRQ	Fn + :	Scroll Lock	Fn + "	PUS/BRK		
Fn + 《	Home	Fn + »	End				

# 键盘休眠及关机

- ·6分钟无按键操作,关闭键盘背光灯,30分钟无操作进入休眠模式,按任意键退出休眠。 (驱动内可调节进入休眠时间)
- ·CAPSLOCK键下的开关下拨即可关闭蓝牙/2.4G模式,有线模式下拔线即可关机。

# Mac模式快捷键功能

Ctrl	Control	Win	Option	Alt	Command		
Fn + <b>0</b>	静音	Fn +=	音量减小	Fn + <del>-</del>	音量加大		
Fn + <b>7</b>	上一曲	Fn + <b>8</b>	播放/暂停	Fn + <b>9</b>	下一曲		
Fn + <b>5</b>	提高键盘 背光灯亮度	Fn + <b>6</b>	降低键盘 背光灯亮度				
Fn + <b>1</b>	降低屏幕亮度	Fn + <b>2</b>	提高屏幕亮度	Fn + <b>3</b>	显示所有窗口	Fn + <b>4</b>	显示应用程序
按键组合	按键功能	按键组合	按键功能	按键组合	按键功能	按键组合	按键功能

# 其他

- ·Fn+ Win键可屏蔽Win键, Win 键被屏蔽时亮白灯。
- ·恢复出厂设置: Fn+D长按3秒, 背光灯白灯闪烁3秒, 恢复出厂成功。

# 驱动功能说明

- ·全局设置:查看设备信息,修改驱动语言,Tap层开关,调节休眠模式,调节延迟,恢复出厂。
- ·按键设置: 修改基础层; Fn1层; Fn2层; Tap层的键值。 可将键值设置为其他按键, 宏定义, 快捷方式及鼠标操作。
- ·灯效设置:切换灯效,修改灯光颜色,自定义灯效。
- ·音乐律动:开启音乐律动,切换音乐律动灯效。
- ·宏 设 置:整理,录制自定义宏。
- ·延迟调节:调节键盘的反应速度。

# 驱动下载

- ·进入阿米洛官网(https://keyboard.varmilo.com) 在技术支持中的搜索栏输入型号,或者在驱动洗项下, 查找对应驱动。
- ·驱动下载链接:https://oss.varmilo.com/varmilo\_asset/v2/software/Varmilo-Sword68-Setup.exe

## Varmilo阿米洛保修信息

- 阿米洛全系列键盘/外设在出售后,会提供给消费者商一年质保服务(配件类为三个月质保服务)。
- 保修期限内以此卡与产品购买日期为依据,请您妥善保存,遗失不予补发。若遗失此卡,您仍可以 依购买凭据(发票,小票)与电商购买信息作为保修依据。
- 免费质保服务仅适用于正常使用下非人为所发生的质量问题,若产品因人为因素或不可抗力造成破坏,则无法享受免费质保服务。其中人为因素包括外力损伤(撞击,刮擦等),进液体(水,饮料等),擅自拆解,移除产品本身的序列号或保修贴纸等;不可抗力包含受洪水、受潮、啮齿动物损坏等自然灾害造成的损害。
- 外壳有印制图案的产品款式请避免用酒精擦拭清理,可使用清水或无酒精洗涤用品清洁。

### 维修须知

- 保修期内您可以享受免费质保服务,保修期外阿米洛仍提供付费维修服务。
- 阿米洛外设产品支持全国联保(仅支持中国大陆地区),您可以联系您购买产品的电商店铺或线下 门店进行保修,也可登录阿米洛官方网站varmilo.com进行保修。

### Preface

Varmilo comes from Esperanto 'Via' 'armilo', which means the unique keyboard customized for you. We were born to meet customer's personality and variety as well as keep good craftsmanship and stable quality. Varmilo is aiming at beautifying your desk setup by the endless improvement and boundless innovation!


# Product Feature

 $The brand-new Varmilo \ mechanical \ keyboard \ series \ adopt \ the \ Cherry \ MX \ switches \ from \ Germany \ with \ stable \ internal \ structures \ and \ tactility.$ 

By keyboard artist Varmilo

#### Daily Maintenance

To clean a keyboard, pull out the keycaps using a key puller, put the keyboard upside down, pat the back of the keyboard to pour out impurity, and brush off the impurity and dust that are adhered to the keys. If residuals exist, wipe them off using a clean cloth with some alcohol. After that, dry the keyboard in a cool and ventilated place. To avoid a loose or fallen USB port, do not frequently plug, unplug, drag or bend a keyboard cable, especially for a keyboard with separate cable and keys.

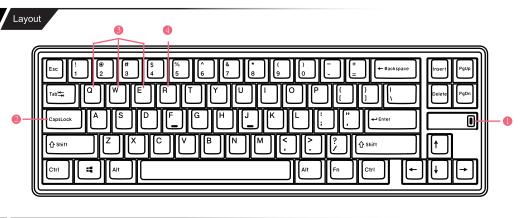



### Matters need attention

- •The Bluetooth device must be Bluetooth 5.0 or above.
- ·All operations combined with Fn key must first press Fn and then press the combined function key to perform the function; the key is released in no particular order.

#### Charging indicator light:

• [Classic Black]: When charging the cable, the red light on the side of the nameplate is steady, when it's full of charge back to normal back lights. When the battery is low, the red light flashes, indicating need to charge.

[Ariel] When charging the cable, the red light on the CAPSLOCK indicator is steady, when it's full of charge back to normal back lights, When the battery is low, the red light flashes, indicating need to charge.

- **@** CAPSLOCK Indicator: White light when capitalized, back to the normal backlight when Lower case.
- Soluetooth Indicator: Q, W, E key indicator corresponding to the channel light blinking blue light indicates waiting for pairing; After successful connection, the blue light off.
- 4 2.4G Indicator: The R key indicator blinks green to indicate that it is waiting for pairing, After successful connection, the green light off.

# Wired, Wireless(Bluetooth & 2.4G) channel switching

- •The wireless mode switch is underneath the CAPSLOCK key, and you need to remove the keycap and turn button to toggle.
- $\cdot \mbox{Flip the switch upward is the wireless mode, Flip the switch down is the wired mode.} \\$
- ·When you turn on the wireless mode, you can choose Bluetooth or 2.4G to connect.
  ·When the keyboard in wireless mode, then connect the charging cable is for charging the keyboard.

### Bluetooth mode connection operation

- $\cdot$  In wireless mode (Bluetooth & 2.4G), select Bluetooth channel Q or W or E, and turn on Bluetooth for search on the device to be connected.
- ·The Bluetooth name of the keyboard is "Varmilo S68".
- $\cdot \, \text{Bluetooth searchable time is 2 minutes}.$
- ·Fn+Q or W or E, switch Bluetooth channel. When switching for the first time, the blue light of Q or W or E key flashes and enters the pairing state.

- •The device search lasts for 2 minutes, and the backlight mode is restored after the device is connected. After the setting is successful, switching the Bluetooth channel will automatically match the set device.
- · Long press Fn+Q/W/E for 3 seconds to reset the corresponding Bluetooth channel and enter the matching state again.
- ·Fn+X long press for 3 seconds and flash the backlight (white) 3 times to clear the pairing record before Bluetooth(Can only be cleared in Bluetooth mode)

### 2.4G Pairing Operation

- · In wireless mode(Bluetooth & 2.4G), long press Fn+R for 3 seconds to pair 2.4G, then the green light under R key flashes.
- · Enter the pairing state, plug in the 2.4G receiver and use it.
- •The code matching time is 20 seconds, and the backlight mode will be restored after the code matching is successful.

(The factory has been paired with the user directly plug the receiver can be used)

### Current light effect

- · **Light effect switching**: Fn+Left Shift or Right Shift, switch the previous or next light effect mode under the current light effect.
- Colour switching: Fn+ "{" or "}" to switch the previous or next color under the monochrome light effect. Lighting Speed: Fn+ "←" or "→" reduces or increases the dynamic speed of the current RGB light effect.
- · Lamp Brightness: Fn+ " ↓ " or " ↑ " to reduce or increase the light effect brightness of the current RGB light effect.

· Light effect restore: Fn+ "D", long press for 3 seconds, the light effect restore factory Settings.

## Tap Layer Function Introduction

- · Tap layer function can be on or off in Driver-Global Settings.
- ·When the Tap function is turned on, a long press on the Tap key triggers the Tap layer function, and a short press on the Tap key will be the original Tap key.
- The higher the sensitivity, the shorter the key press time required to trigger the Tap layer in the key setting of the driver software to modify the Tap layer function.
- $\cdot \textbf{Switch to the Tap layer in the key setting of the driver software to modify the Tap layer function.} \\$

## Multimedia Function

Combinations	Functions	Combinations	Functions	Combinations	Functions	Combinations	Functions
Fn + F	Music	Fn + G	Email	Fn + H	Calculator	Fn + J	Computer
Fn + T	Last song	Fn + Y	Plya/Pause	Fn + U	Next song		
Fn + O	Volume Down	Fn + I	Mute	Fn + P	Volume Up		
Fn + L	PSC/SRQ	Fn + :	Scroll Lock	Fn + "	PUS/BRK		
Fn + 《	Home	Fn + 》	End				

#### Hibernation and shutdown

· 6 minutes without key operation, turn off the keyboard backlight, 30 minutes without operation into sleep mode, press any key to exit sleep. (Regulatory time into dormancy within drive)

CAPSLOCK The switch under the key can turn off the Bluetooth / 2.4G mode, and the cable can be pulled off in the wired mode. Keyboard hibernation and shutdown

# Mac Mode-Multi-Media Keys

Combinations	Functions	Combinations	Functions	Combinations	Functions	Combinations	Functions
Fn + <b>1</b>	Brightness –	Fn + <b>2</b>	Brightness +	Fn + <b>3</b>	Display all interfaces	Fn + <b>4</b>	Display all apps
Fn + <b>5</b>	Keyboard backlight brightness+	Fn + <b>6</b>	Keyboard backlight brightness-				
Fn + <b>7</b>	Last song	Fn + <b>8</b>	Plya/Pause	Fn + <b>9</b>	Next song		
Fn + <b>0</b>	Mute	Fn +=	Volume Down	Fn + <del>-</del>	Volume Up		
Ctrl	Control	Win	Option	Alt	Command		

# System switching

·Fn + Tab long press for 5 seconds to switch Win or Mac system, charging indicator (Ariel is CAPSLOCK light) flashes white light for 3 seconds and then snuffed out.

### Driver Function Description

- · **Global Settings:** View device information, modify driver language, boot up, Tap layer on or off, sleep mode, delay, reset.
- · **Key Setting:** Modify the key setting of Base Layer, Fn1 Layer, Fn2 Layer and Tap Layer, you can set key, macro, shortcut and mouse.
- · Light Mode settings: switch the Light Mode, modify the colour of the Light Mode, customize the Light Mode.
- · Music Rhythm: Turn on Music Rhythm and switch the music rhythm Light Mode.
- · Delay adjustment: Adjust the response speed of the keyboard.

· Macro Settings: Typing and record custom macros.

# Other

- · Fn + Win key can screen Win key, Win key when the white light is screened.
- · Restore the factory setting: Fn + D long press for 3 seconds, backlight white light flashing for 3 seconds, restore the factory successfully.

### **Driver Download**

· In Varmilo website (https://keyboard.varmilo.com), select Technical Support,

search the model number in the search bar, or choose the Driver button to look for the corresponding model driver.

 $\cdot Driver\ download\ link: https://oss.varmilo.com/varmilo\_asset/v2/software/Varmilo-Sword68-Setup.execom/varmilo_asset/v2/software/Varmilo-Sword68-Setup.execom/varmilo-sword68-Setup.execom$ 

· Hold down Fn + Tab key for 5 seconds to switch to the Win or Mac mode.

When the keyboard is used for the first time, the default mold is Win mode.

[Lalic and Black] The indicator on the nameplate flashes a white light for three seconds, indicating that the switch is successful.

[Arile] The CAPSLOCK key indicator blinks white for three seconds, indicating that the switchover is successful.

### Valmiro warranty service information

- Varmilo provides one year free warranty service for keyboards and three months for accessories from the date of order receipt.
- The warranty period is based on this card and the date of purchase. Please keep it properly.

  If you lose this card, you can still use the purchase voucher (invoice, receipt) and the purchase information of e-commerce as the warranty basis
- Free warranty service is only applicable to non-human quality problems in normal use.
   If the product is damaged due to human factors or force majeure, the free warranty service cannot be provided. Human factors include external damage (impact, scraping, etc.), liquid (water, beverage, etc.), unauthorized disassembling, removing the serial number or warranty sticker of the product itself, etc. Force majeure includes the damage caused by flood, dampness, rodent damage and other natural disasters
- For products with printed patterns on the cases, please avoid wiping with alcohol and use clean water or alcohol-free cleaning products

### Maintenance Instructions

- During the warranty period, you can enjoy the free warranty service. If exceeded free warranty period, Varmilo will still provide paid maintenance service.
- Customers could ask for warranty service from where you purchased the products, or contact support@zhihaihe.cn for further assistan.



OffcialWebsite



Weibo



WeChat



Instagram



Twitter





扫码即可了解有关阿米洛产品的最新信息。

Scan the QR code for more detailed and updated news of Varmilo.



# VARMILO

志海和营销 (深圳) 有限公司 ZhiHaiHe Marketing(ShenZhen) Co.,Ltd 电话(TEL):+86-755-2644 4009 传真(FAX):+86-755-2644 4428 官网(WEB):varmilo.com

地址(ADD):中国广东省深圳市光明新区田寮社区第十工业区3栋2楼B区 Unit B,2nd Floor,Block 3,10th Industrial Zone,Tian Liao CommUNity,Guang Ming New District,Shen Zhen,China.