





FAA11 FAB11-Arcade Controller

配件介绍

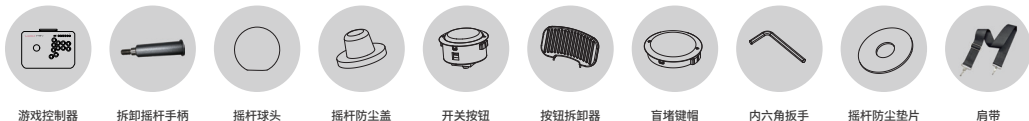


指示灯说明

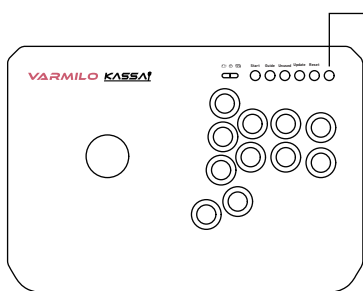


指示灯位于设备右上方

- 游戏控制器异常：亮红灯
- 切换模式：彩色灯光闪烁后亮白灯
- 游戏控制器通电：白灯
- 游戏控制器断电：熄灭
- 恢复出厂设置：彩色灯光闪烁三秒后亮白灯
- 设置组合键：绿色灯光闪烁后亮白灯

产品说明

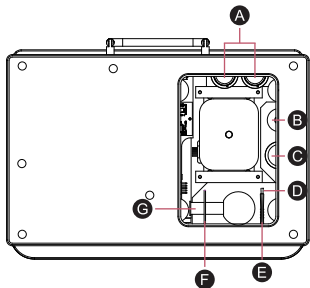

 
- A 备用开关按钮
- B 摇杆防尘盖
- C 备用盲堵键帽
- D 内六角扳手
- E 按钮拆卸器
- F 备用摇杆防尘垫片
- G 快速脱装摇杆




Type C扩展按键接口



USB数据线

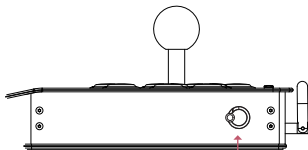

肩带挂扣

 

模式切换

键盘模式


(将开关拨到**右边**)

- A Tab
- B Esc
- C Win+G
- D R-mouse
- E Reset
- F Light
- G 模式切换开关

手柄模式

(将开关拨到**左边**)

- Start
- Guide
- Unused
- Update
- Reset
- Light
- 模式切换开关

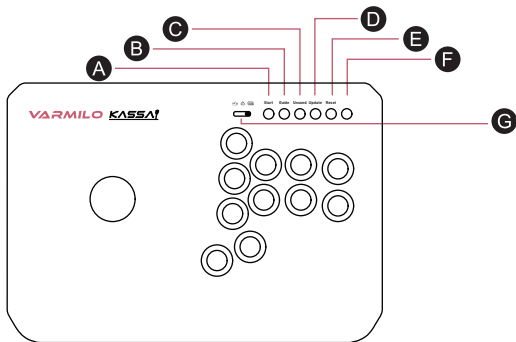


备注

若您需要将KASSAI连接PS5使用, 建议将连接方法设置为“使用USB连接线”, 以获得最佳使用体验


设置方法: 在PS5的设置菜单中依次选择设定>周边设备>控制器, 将连接方法由“使用Bluetooth”修改为“使用USB连接线”

布局图参考

键盘模式

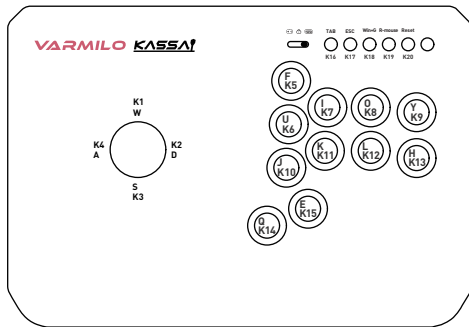

手柄模式

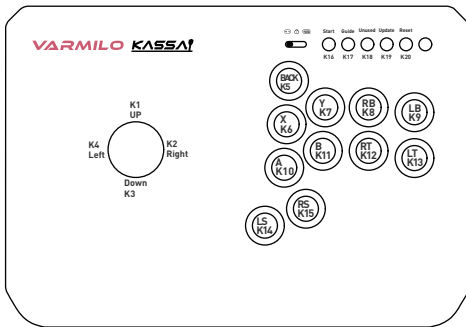

按钮更换

开关按钮拆卸



1

拆卸工具
(拆换前请将游
戏控制器断电)



2

将按钮拆卸器的金属
针脚对准底座的两个
孔，“用力下压”逆时
针旋转到底



3

取出开关按钮即可

开关按钮安装

1
按键侧面标注了按
键的总行程
(1.0/1.5/2.0mm三种)
安装前请注意



2

将按钮拆卸器的金
属针脚对准底座的
两个孔




3

用力下压并顺时针旋
转，听到<咔嚓>一声
代表安装完成



按钮设置

出厂默认1.5mm

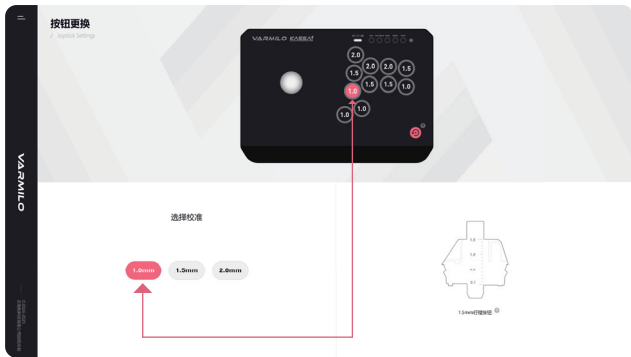

在更换不同行程的按键之后，须在网页驱动中修改对应按键的行程

例如

上图中K10位置更换成了1.0mm行程的按键，则需要在网页驱动中将K10的行程参数改为1.0mm

组合键功能

注:所有组合键都需**长按3秒~**


名称	操作模式	功能	说明	组合键
性能设置	键盘模式设置	固定(↑+↓)	↑+↓被同时按下的时候做冲突抵消,无方向键值触发输出	K17+K5
		固定(←+→)	←+→被同时按下的时候做冲突抵消,无方向键值触发输出	K17+K6
		固定(某个键位)	表示←+→被按下的时候,←键位优先输出	K17+K7
			表示←+→被按下的时候,→按键优先输出	K17+K8
			表示↑+↓被按下的时候,↑按键优先输出	K17+K9
			表示↑+↓被按下的时候,↓按键优先输出	K17+K10
		优先顺序	输出最先按的方向键	K17+K11
		优先顺序	输出最后按的方向键	K17+K12
		关闭设置	设置关闭时固定功能和优先顺序功能失效,同时按下方向键时,都触发输出方向键值	K17+K13

键层切换	键盘模式设置	M1 (默认) -M5	共有五层键层, 每层键层内容可自定义按键, 可选择任意一层作为默认层 (M1)	K19+K5 (M1) K6 (M2) K7 (M3) K8 (M4) K9 (M5)
DP/LS/RS模式	键盘模式设置	DP (默认) /LS/RS	游戏手柄控制器上的方向功能, DP为方向键, LS为左摇杆, RS为右摇杆	K16+K10 (DP) K16+K14 (LS) K16+K15 (RS)


产品参数

外壳材质	铝合金阳极氧化
开关按钮材质	PBT、ABS、PC
产品尺寸mm	318.22*219.97*46.8mm 318.22*219.97*109.5mm
产品重量kg	2.5kg
按键兼容	1.0/1.5/2.0(± 0.2 mm)
按键初始压力gf	40gf(+10gf-10gf)
按键触底压力gf	50gf(+10gf-10gf)
触发行程(默认) mm	0.3mm(+0.1mm -0.15mm)
断开行程(默认) mm	抬起敏感度0.2mm
产品功耗mAh	DC5V ≤ 35 mAh
触发后响应速度ms	5ms (可调)
回报率Hz	支持1000Hz
摇杆模式	DP模式(默认)、LS模式、RS模式共三种可选


Accessory Introduction

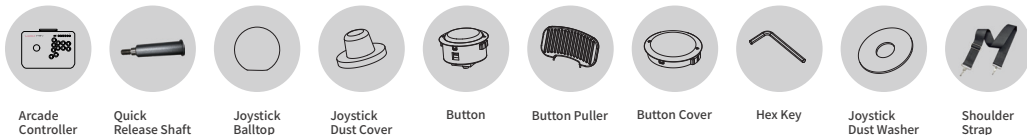


Indicator Light Description

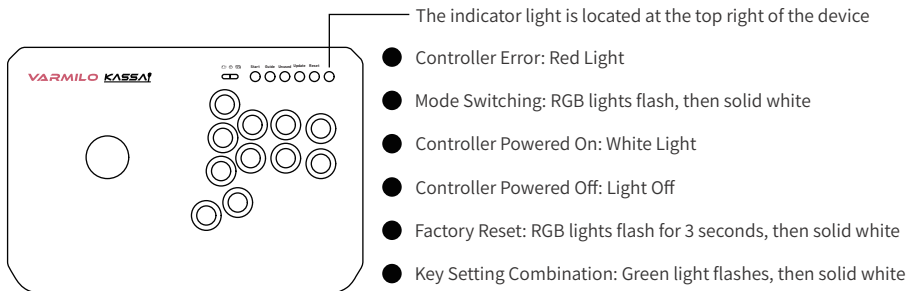

Product Description

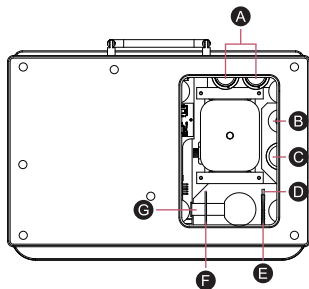


 - A** Spare Button
- B** Joystick Dust Cover
- C** Spare Button Cover
- D** Hex Key
- E** Button Puller
- F** Spare Joystick Dust Washer
- G** Quick-Release Joystick



Accessory Port-C

USB Cable

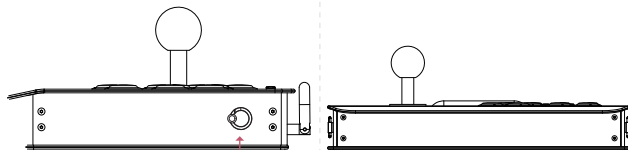

Shoulder Strap Buckle

Mode Switching

Keyboard Mode


(Slide the switch to the **right**)

- A** Tab
- B** Esc
- C** Win+G
- D** R-mouse
- E** Reset
- F** Light
- G** Mode Switch

Controller Mode

(Slide the switch to the **left**)

- Start
- Guide
- Unused
- Update
- Reset
- Light
- Mode Switch

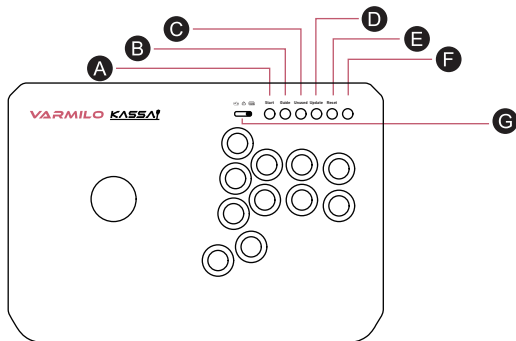


Notes

If you need to use KASSAI with PS5, it is recommended to set the connection method to “Use USB Cable” for the best user experience.


Setting method: In the PS5 settings menu, select Settings > Accessories > Controller in sequence, and change the Communication Method from “Use Bluetooth” to “Use USB Cable”.

Layout Reference

Keyboard Mode

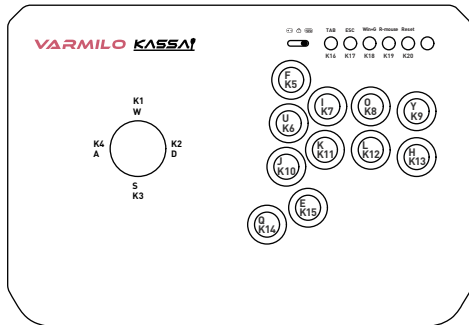

Controller Mode

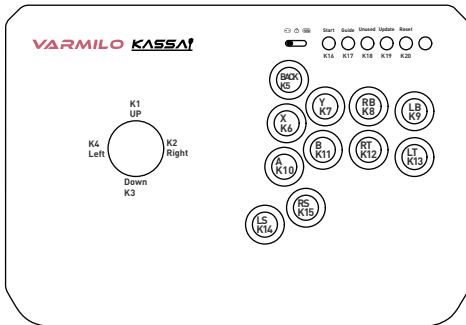

Button Replacement

Button Removal

1

Button Puller
 (Please power
 off controller
 before replacing)



2

Align the metal pins of
 the button puller with
 the two holes on the
 base, press down firmly,
 and rotate counterclockwise
 until it stops



3

Remove the button



Button Installation

1

The side of the button is
 marked with its total travel
 (1.0/1.5/2.0mm) Please
 check before installing



2

Align the metal pins of the
 button puller with the two
 holes on the base




3

Press down firmly and
 rotate clockwise until you
 hear a "click" sound,
 indicating the installation
 is complete



Key Setting

Default is 1.5mm

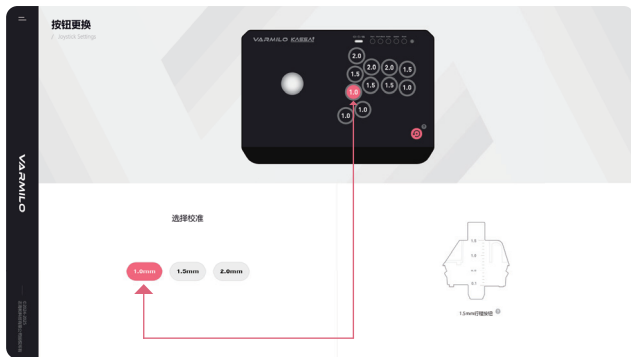

After replacing to a button with different travel distance, must update the travel setting in the web configurator

For example

If K10 is replaced with a 1.0mm travel switch, then you must set K10's travel parameter to 1.0mm in the web driver

Combination Key Functions

Note: All key combinations must be **held for 3 seconds~**

Feature	Operation Mode	Function	Description	Key Combination
Performance Setting	Keyboard Mode Setting	Fixed (↑+↓)	When ↑ + ↓ are pressed at the same time, both inputs are canceled and no direction is output	K17+K5
		Fixed (←+→)	When ← + → are pressed at the same time, both inputs are canceled and no direction is output	K17+K6
		Fixed (Key)	When ← + → are pressed simultaneously, Left takes priority and is output	K17+K7
			When ← + → are pressed simultaneously, Right takes priority and is output	K17+K8
			When ↑ + ↓ are pressed simultaneously, ↑ takes priority and is output	K17+K9
			When ↑ + ↓ are pressed simultaneously, ↓ Down takes priority and is output	K17+K10
		Priority	Outputs the direction key that was pressed first	K17+K11
		Priority	Outputs the direction key that was pressed last	K17+K12
		Disabled	When this setting is disabled, both Fixed and Priority Order functions are turned off. When opposite direction keys are pressed simultaneously, both directions are output	K17+K13

Layer Switching	Keyboard ModeSetting	M1 (Default) -M5	There are five custom layers in total, labeled M1 (default) through M5.Each layer' s key assignments can be customized.You can select any one layer as the default layer (M1)	K19+K5 (M1) K6 (M2) K7 (M3) K8 (M4) K9 (M5)
DP/LS/RMode	Keyboard ModeSetting	DP (Default) /LS/RS	Direction input modes on the game controller DP refers to the D-pad (directional pad), LS refers to the Left Stick, and RS refers to the Right Stick	K16+K10 (DP) K16+K14 (LS) K16+K15 (RS)

Product Specifications

Case Material	Anodized Aluminum Alloy
Button Material	PBT, ABS, PC
Product Dimensions (mm)	318.22*219.97*46.8mm 318.22*219.97*109.5mm
Product Weight (kg)	2.5kg
Key Compatibility	1.0/1.5/2.0(± 0.2 mm)
Initial Actuation Force (gf)	40gf(+10gf-10gf)
Bottom-Out Force (gf)	50gf(+10gf-10gf)
Actuation Point (Default) (mm)	0.3mm(+0.1mm -0.15mm)
Deactivation Point (Default) (mm)	Lift-Off Sensitivity 0.2 mm
Power Consumption (mAh)	DC5V ≤ 35 mAh
Response Time After Activation (ms)	5ms (Adjustable)
Polling Rate (Hz)	Support 1000Hz
Joystick Mode	DP Mode(Default), LS Mode, RS Mode—three options in total

Varmillo阿米洛保修服务卡与电子说明书

- 阿米洛全系列产品/外设在售出后,会提供给消费者一年质保服务(配件类为三个月质保服务)。
- 保修期限内以此卡与产品购买日期为依据,请您妥善保管,遗失不予补发。若遗失此卡,您仍可以依购买凭据(发票,小票)与电商购买信息作为保修依据。
- 免费质保服务仅适用于正常使用下非人为所发生的质量问题,若产品因人为因素或不可抗力造成破坏,则无法享受免费质保服务。其中人为因素包括外力损伤(撞击,刮擦等),进液体(水,饮料等),擅自拆解,移除产品本身的序列号或保修贴纸等;不可抗力包含受洪水、受潮、啮齿动物损坏等自然灾害造成的损害。
- 外壳有印制图案的产品款式请避免用酒精擦拭清理,可使用清水或无酒精洗涤用品清洁。

维修须知

- 保修期内您可以享受免费质保服务,保修期外阿米洛仍提供付费维修服务。
- 阿米洛外设产品支持全国联保(仅支持中国大陆地区),您可以联系您购买产品的电商店铺或线下门店进行保修,也可登录阿米洛官方网站varmilo.com进行保修。



其他语言保修条款请扫左侧二维码



产品说明书:

扫描左侧二维码或登录varmilo.com在线查看或下载

Varmilo Warranty Service Card & “E” User’ s Manual

- Varmilo provides one year free warranty service for keyboards and three months for accessories from the date of order receipt.
- The warranty period is based on this card and the date of purchase. Please keep it properly. If you lose this card, you can still use the purchase voucher (invoice, receipt) and the purchase information of e-commerce as the warranty basis
- Free warranty service is only applicable to non-human quality problems in normal use. If the product is damaged due to human factors or force majeure, the free warranty service cannot be provided. Human factors include external damage (impact, scraping, etc.), liquid (water, beverage, etc.), unauthorized disassembling, removing the serial number or warranty sticker of the product itself, etc. Force majeure includes the damage caused by flood, dampness, rodent damage and other natural disasters
- For products with printed patterns on the cases, please avoid wiping with alcohol and use clean water or alcohol-free cleaning products

Maintenance Instructions

- During the warranty period, you can enjoy the free warranty service. If exceeded free warranty period, Varmilo will still provide paid maintenance service
- Customers could ask for warranty service from where you purchased the products, or contact support@zhihaihe.cn for further assistance.



**For warranty terms in other languages,
please scan the QR code above**



User’ s Manual

**Scan the QR code above or log in to
varmilo.com to view or download online**



VARMILO **KASSAI**

<https://fk2.varmilo.com/>

制造商:深圳市志海和科技有限公司

地 址:深圳市光明区玉塘街道田寮社区第十工业区2栋501

电 话:0755-2648 4009

Manufacturer: Shenzhen Zhihaihe Tech Co., Ltd

Address: 5th Floor, Block 2, 10th Industrial Zone, Tian Liao Community,
Yu Tang Area, Guang Ming District, Shenzhen, China

Telephone:+86-755-2648 4009